




Nanoptix EZ-Load 65mm convert instructions

Step 1:


Remove the 4 mounting screws from the current chute and remove the chute.

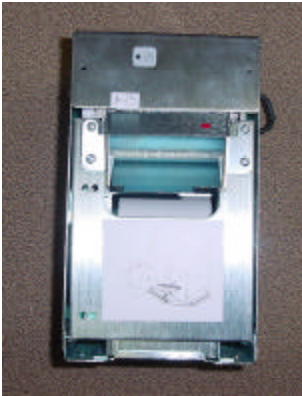

(Picture of EZ-load and old chute)

Step 2:


Assemble the new chute by aligning the 4 mounting holes.

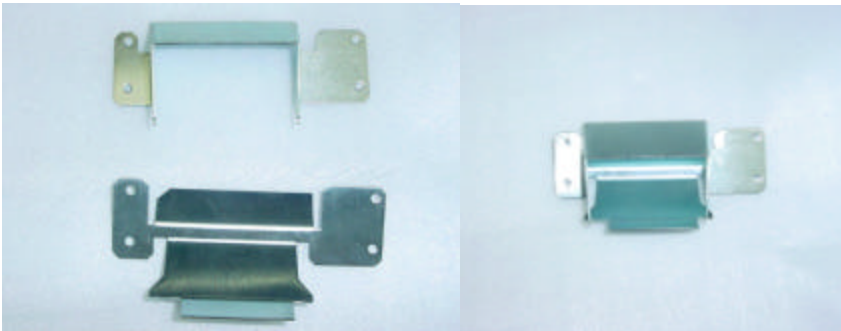

(Picture of new chute not assembled) (Picture of new chute assembled)

Step 3:


Align the 4 holes of the EZ-Load with those of the new chute and insert the 4 screws.

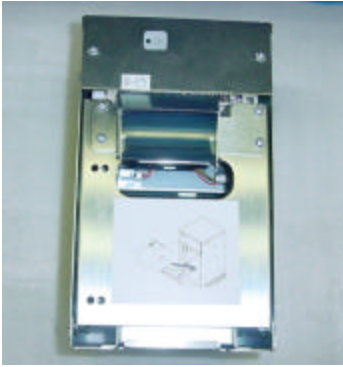

(Picture of EZ-Load with new chute)

Step 4:



Open the EZ-Load printer and remove any roll of paper if any

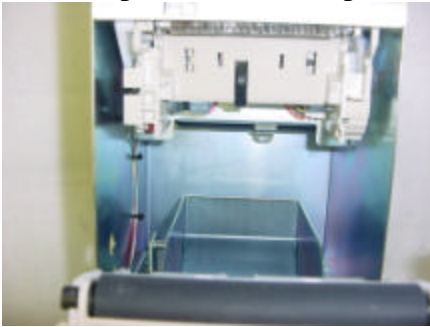

(Picture of opened EZ-Load)

Step 5:

Insert the 65mm insert into the EZ-load.

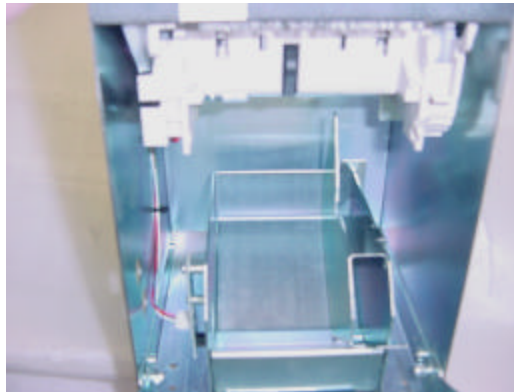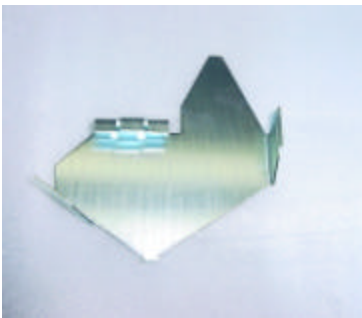

(Picture of the 65mm insert) (Picture of the 65mm insert into the printer)

For more information, contact:
Gilles Robichaud
Customer Service Manager
Nanoptix Inc.
699 Champlain St.
Dieppe, NB, Canada
E1A 1P6
Tel: 506.384.3388
Fax: 506.384.3588
E-mail: grobichaud@nanoptix.com